 
 
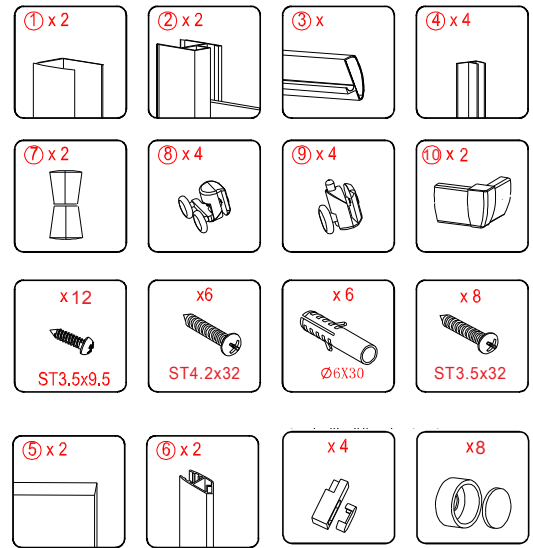 
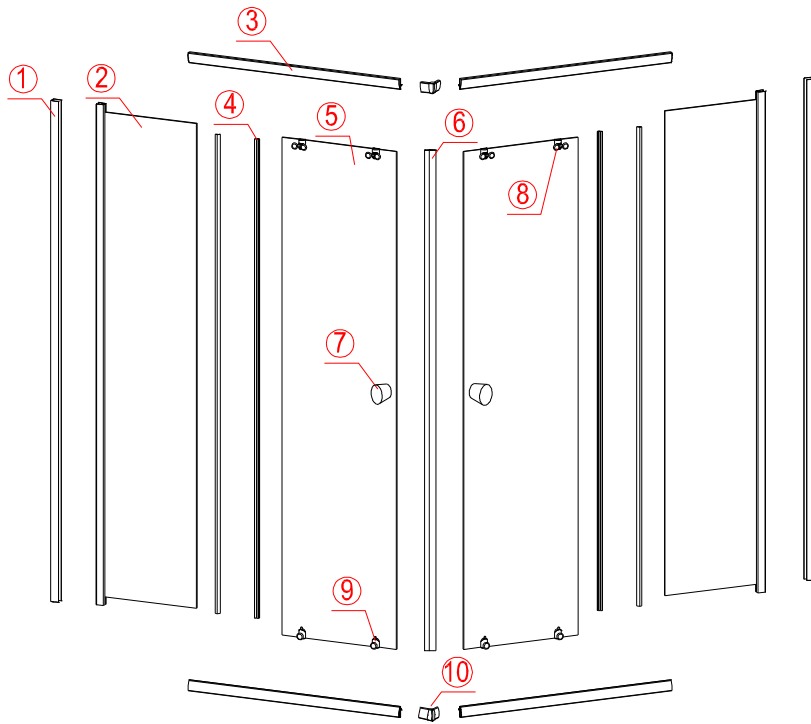 


HLF808/909

INSTALAČNÍ NÁVOD / INSTALLATION INSTRUCTION

 
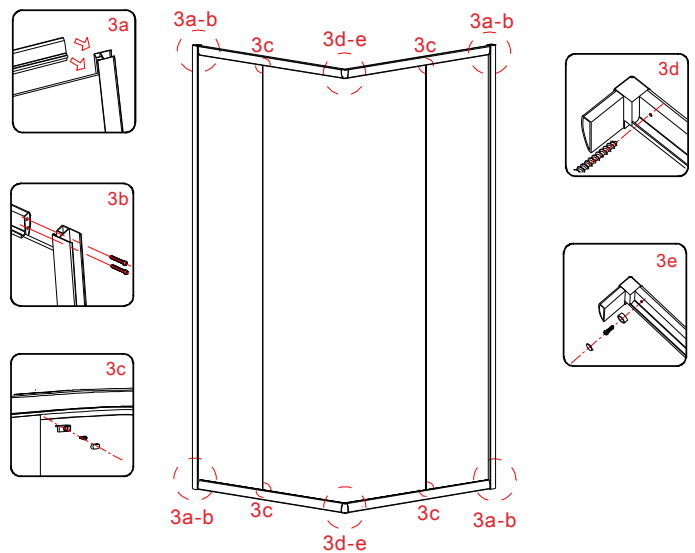 


1



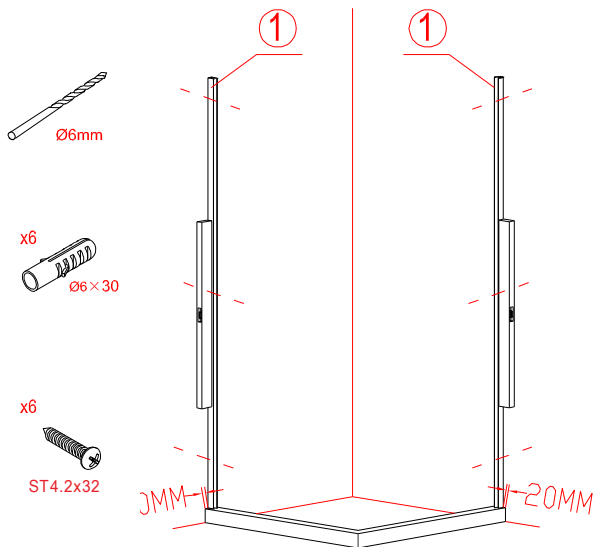


2




3

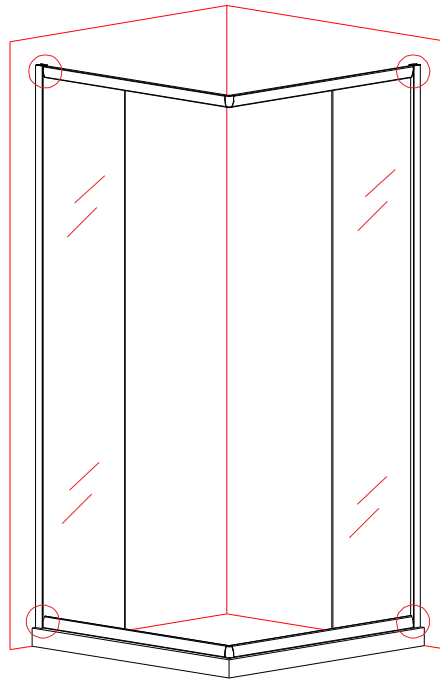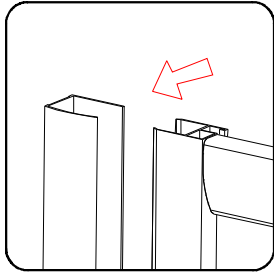






4

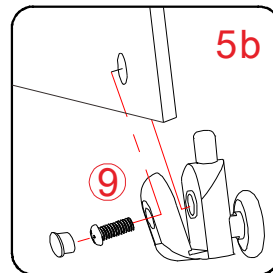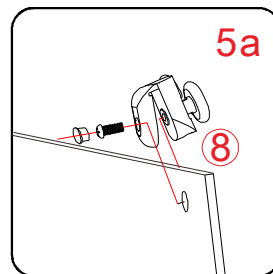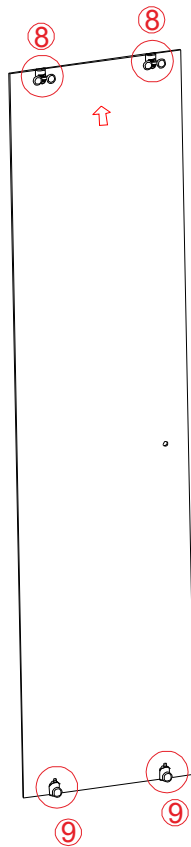   





5

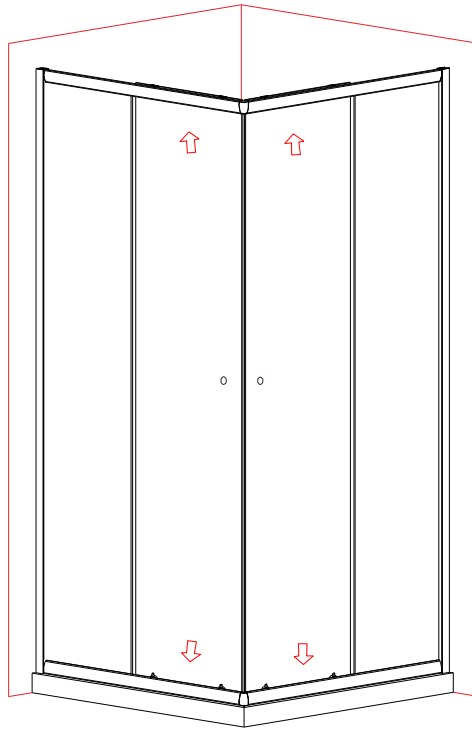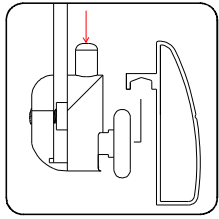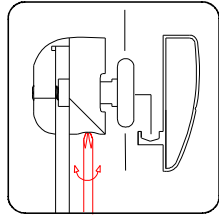   

6

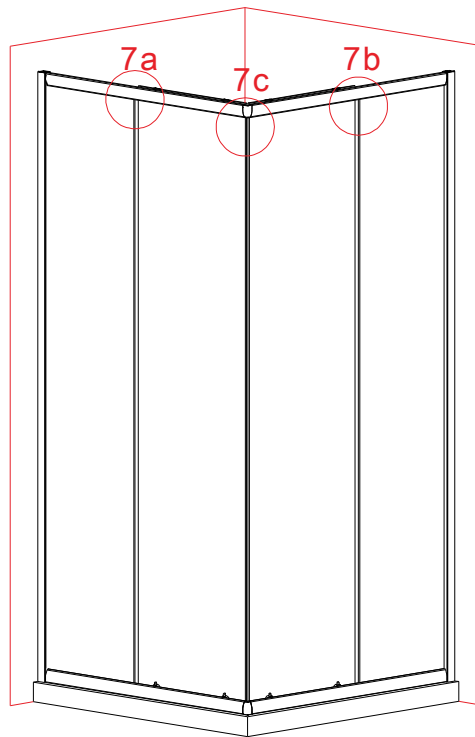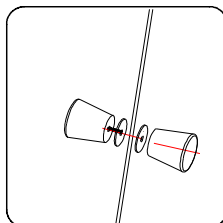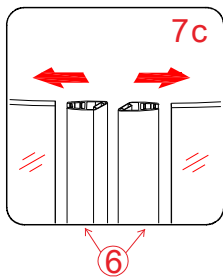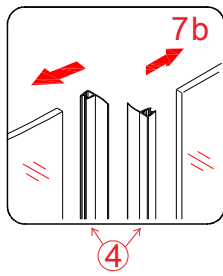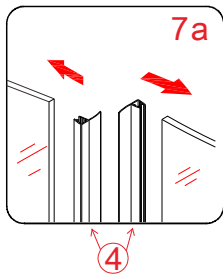     

7

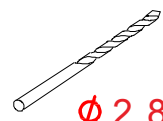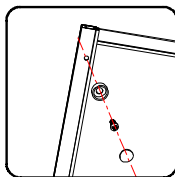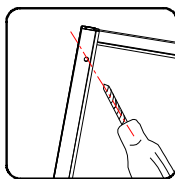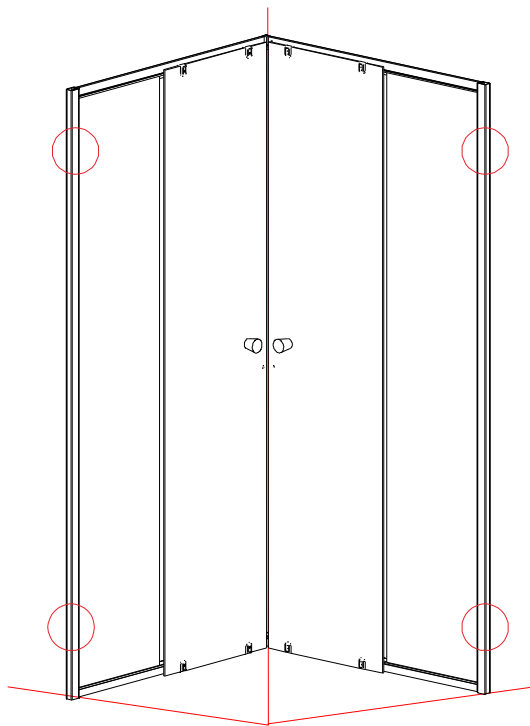    

Ø 2.8mm

x 4









ST3.5x9.5


x 4



      8

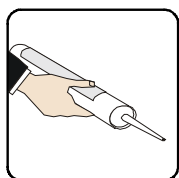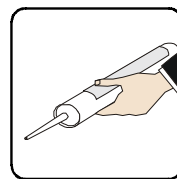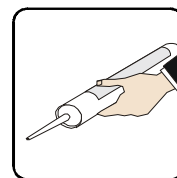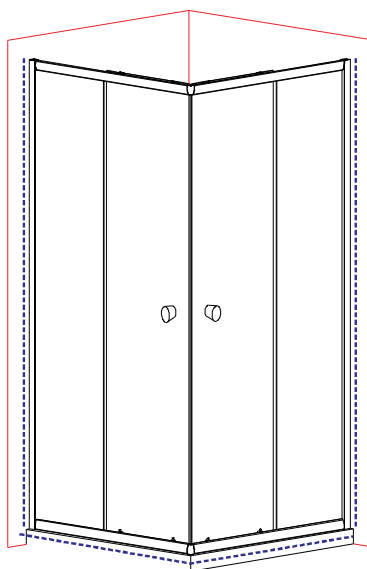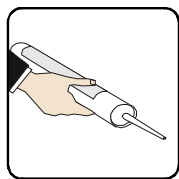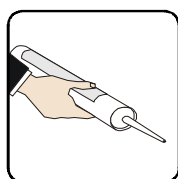

24 hodin

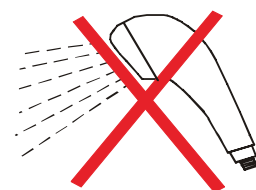 

9