



Uživatelský návod pro

bezrámové pantové zástěny

Vitra Line

BN 1915 L

BN 2015 L

BN 2115 L

BN 4415 L


BN 4515 L












Polysan s.r.o
Nesměřice 52
285 22 Zruč nad Sázavou


www.polysan.cz
www.polysan.net

e-mail: info@polysan.net

tel.: +420 327 585 983
fax.: +420 327 585 989


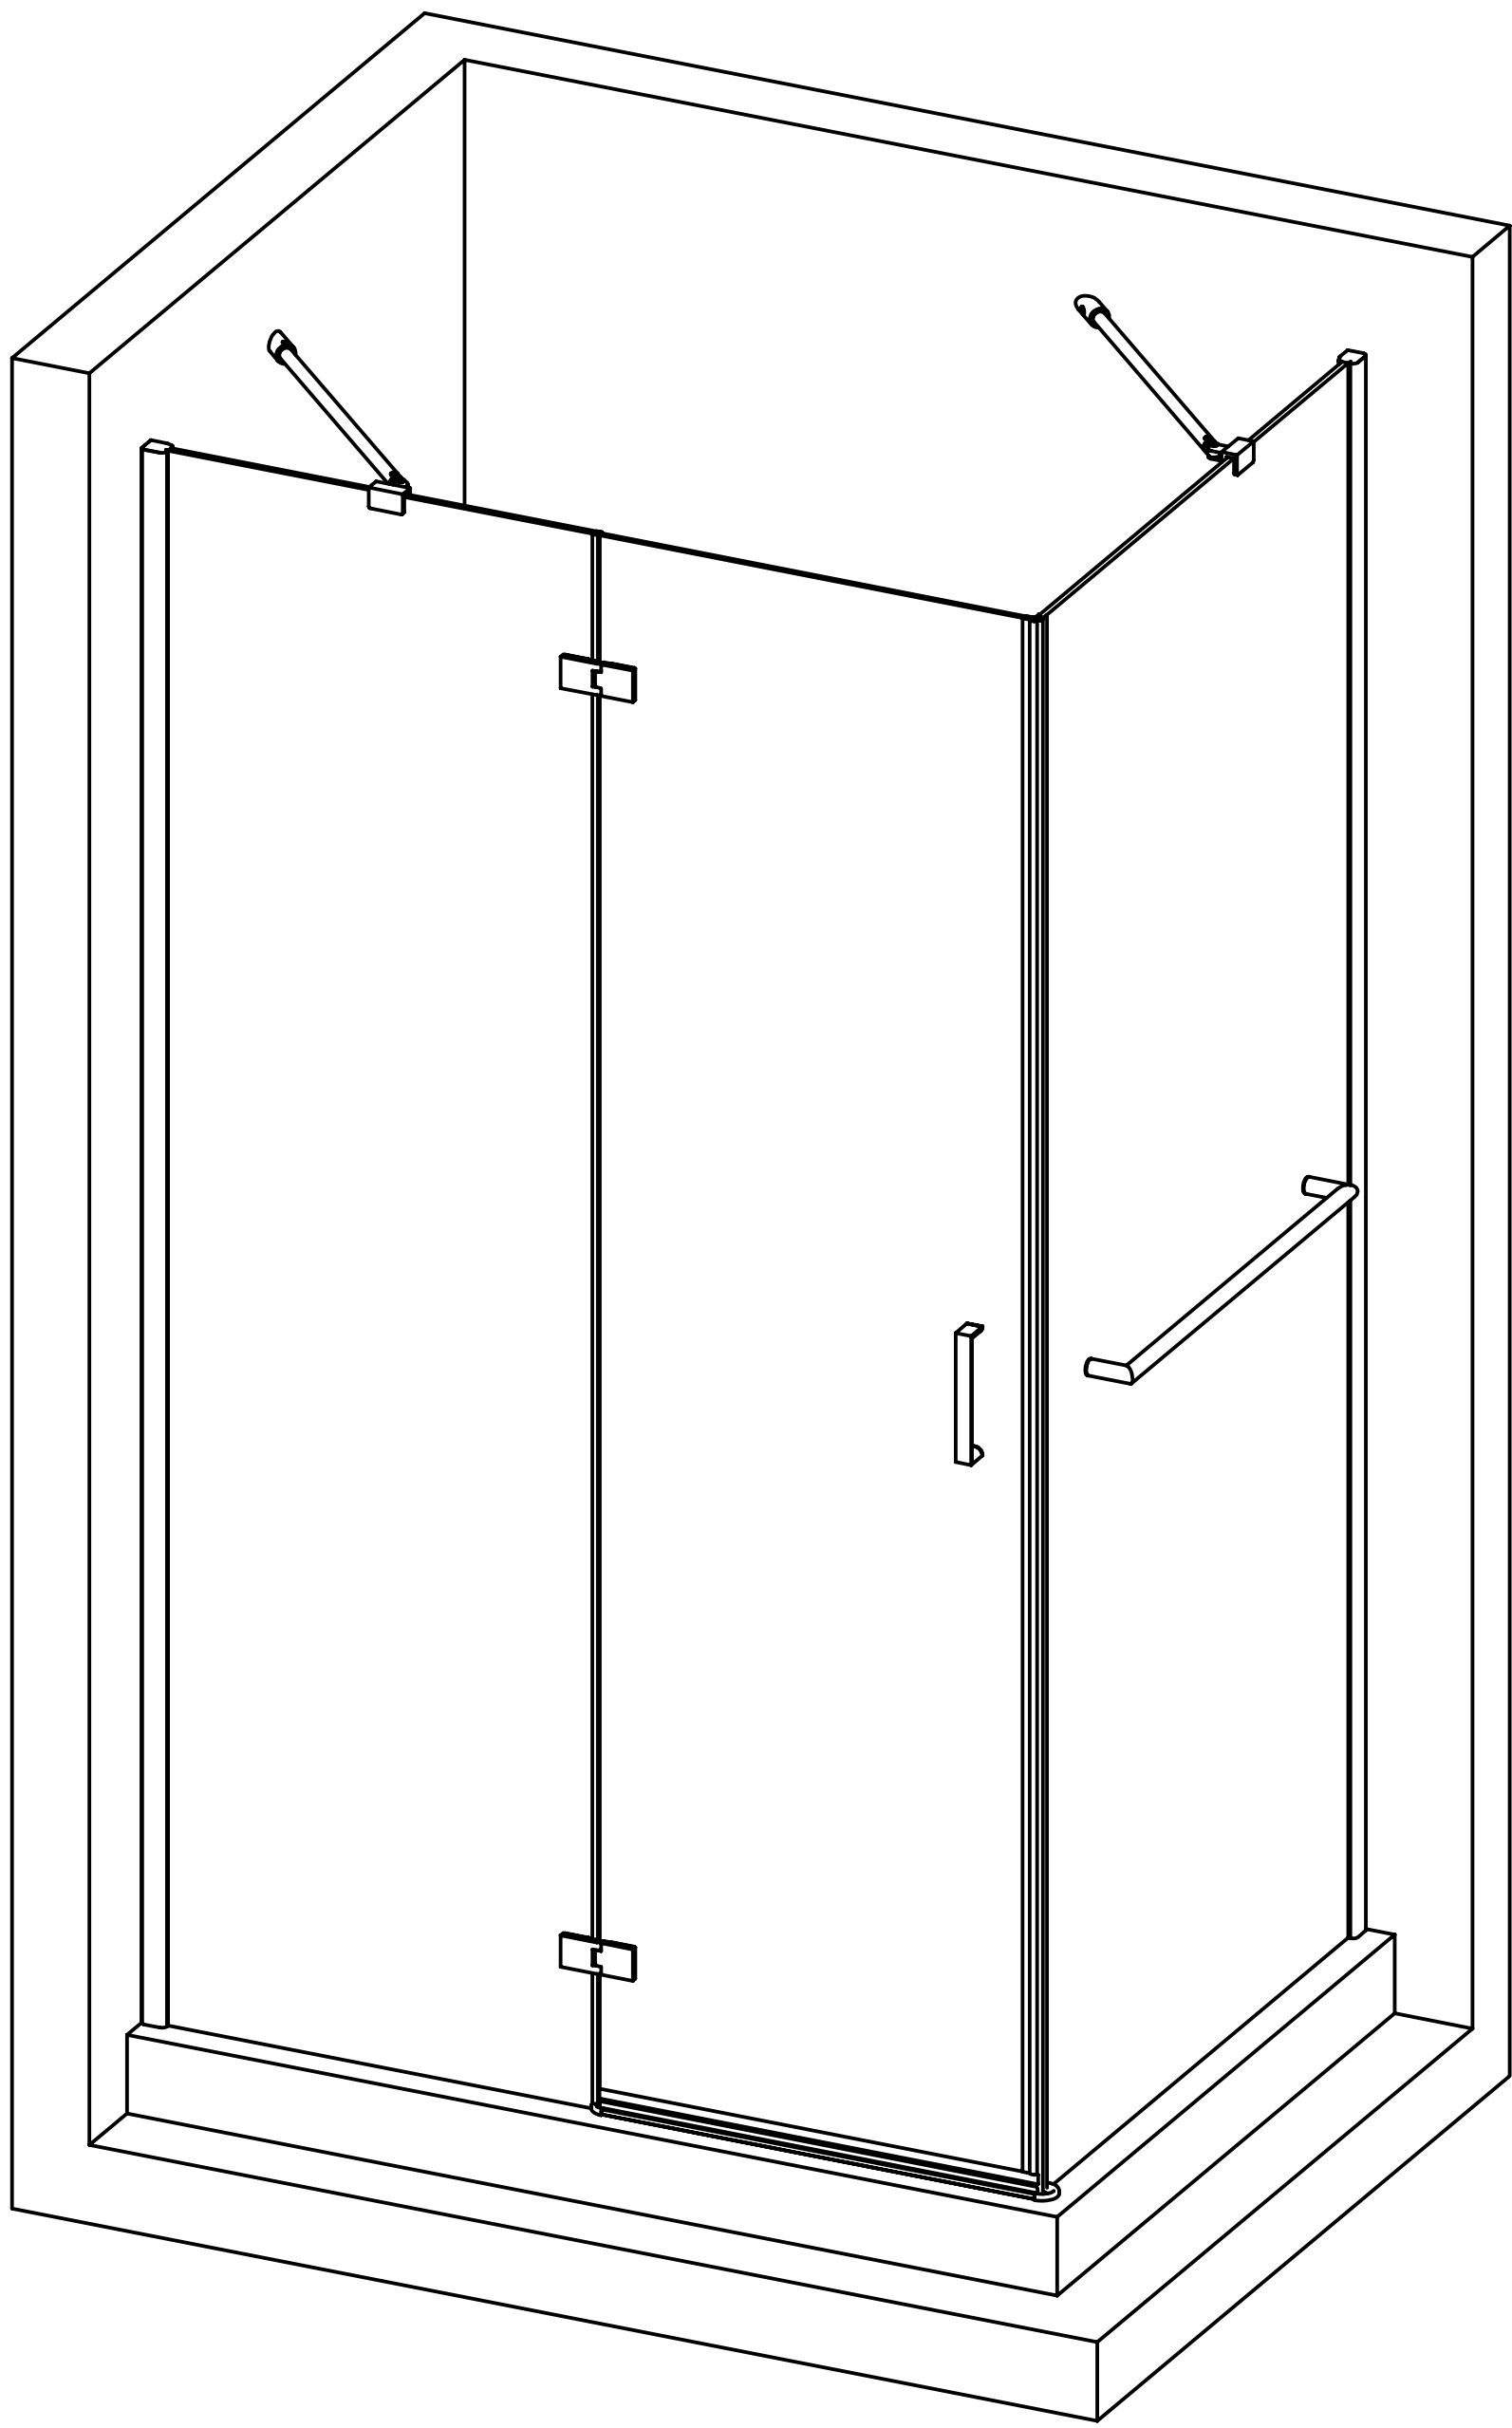


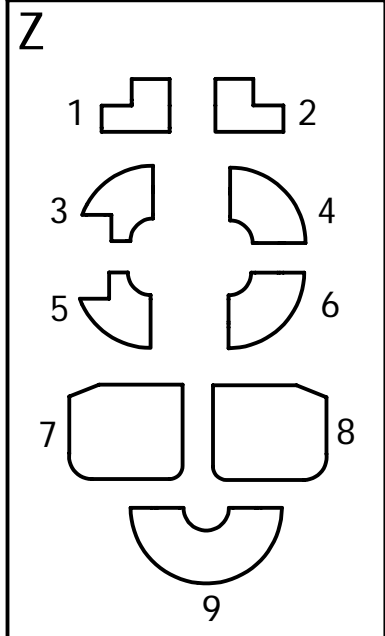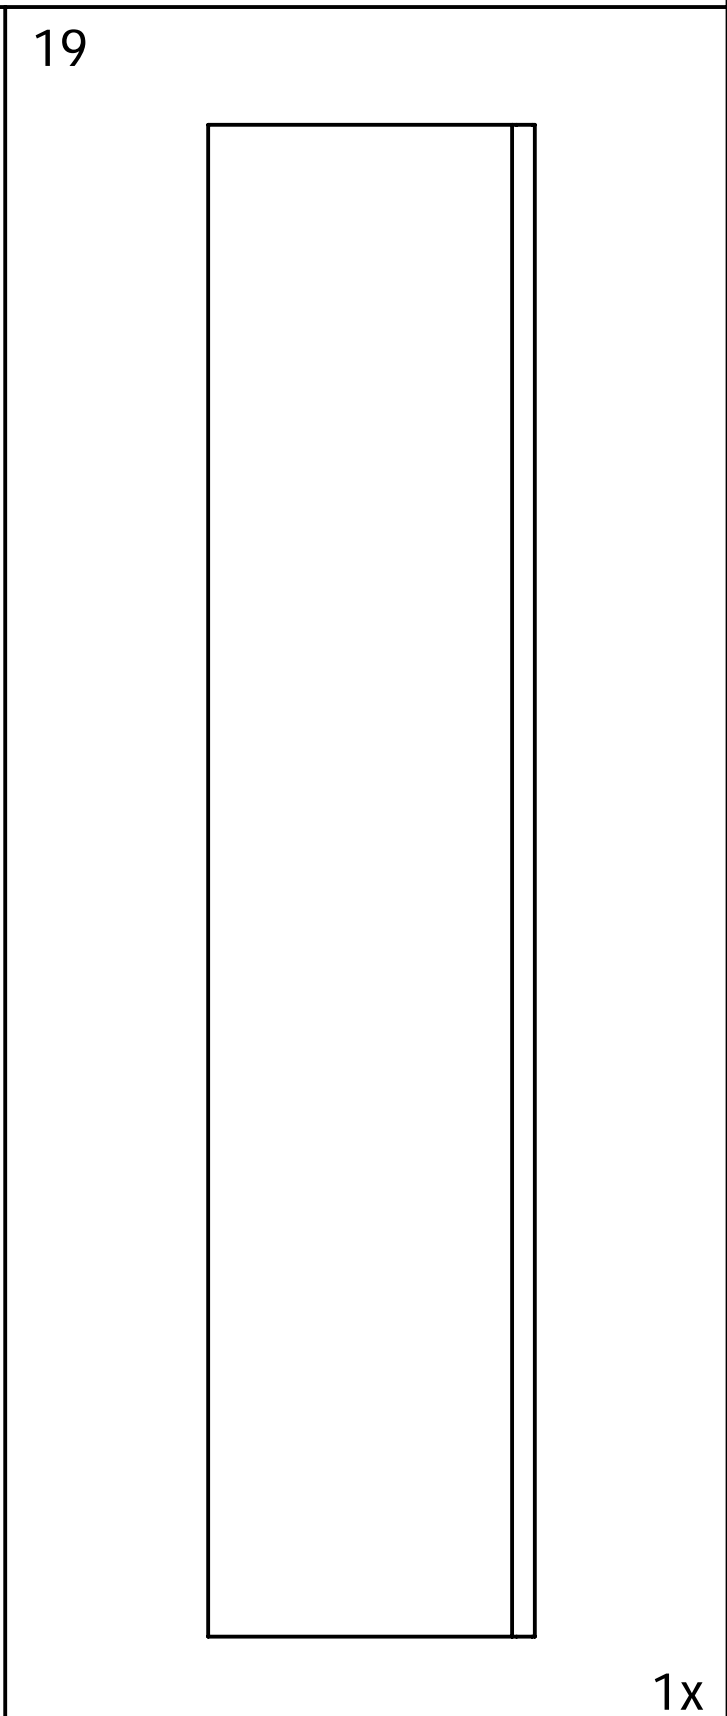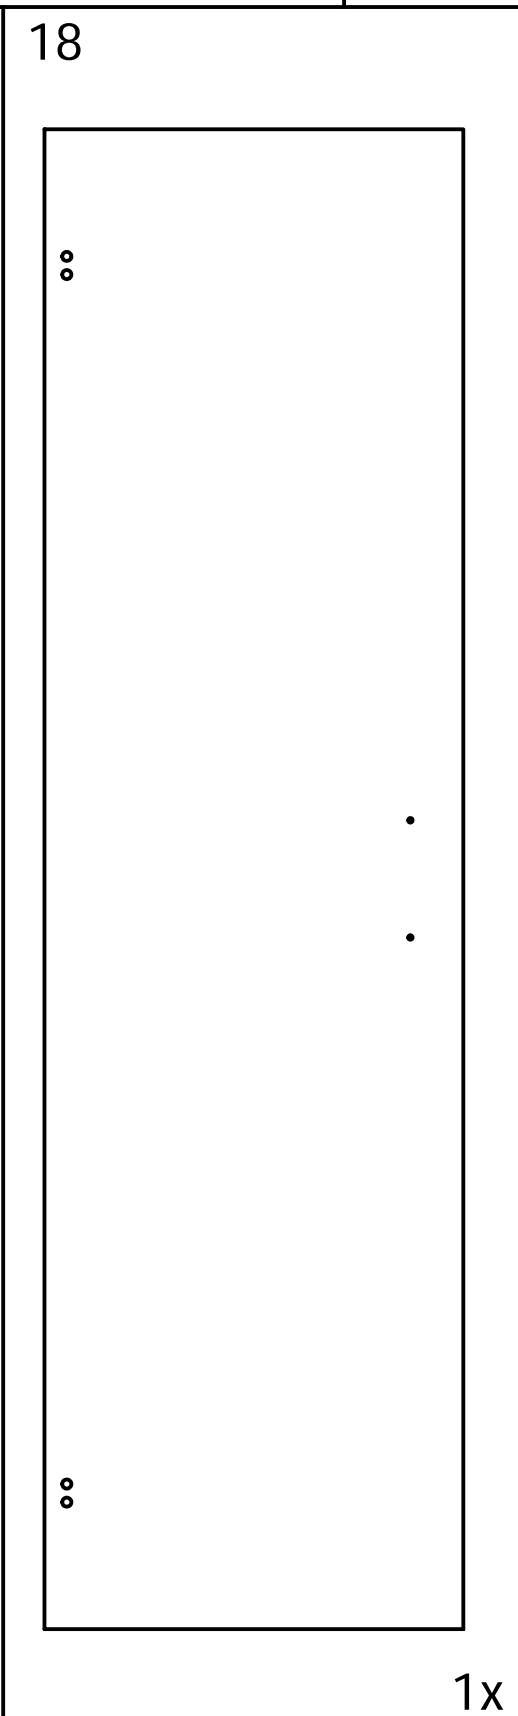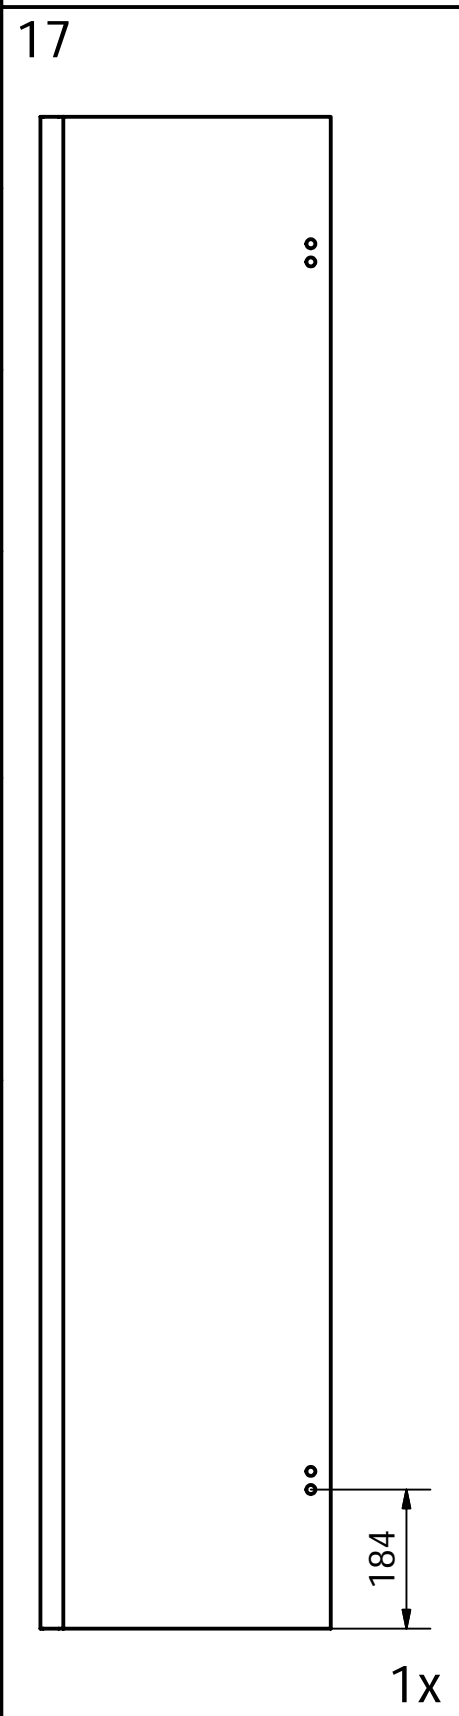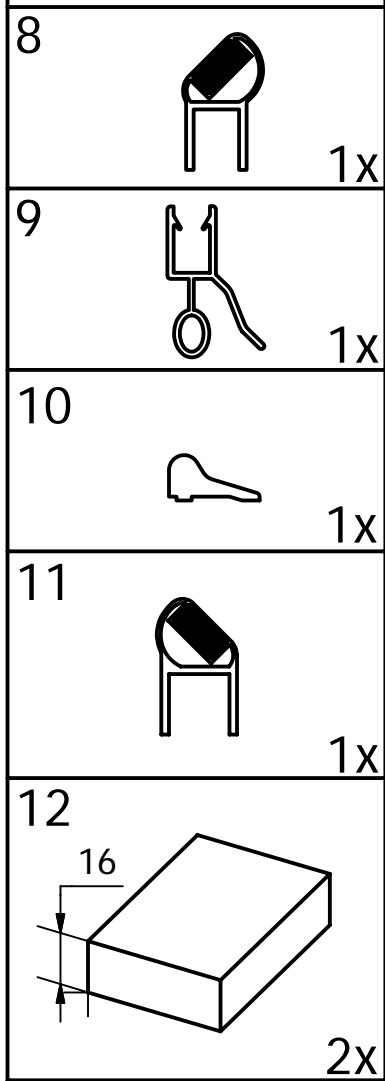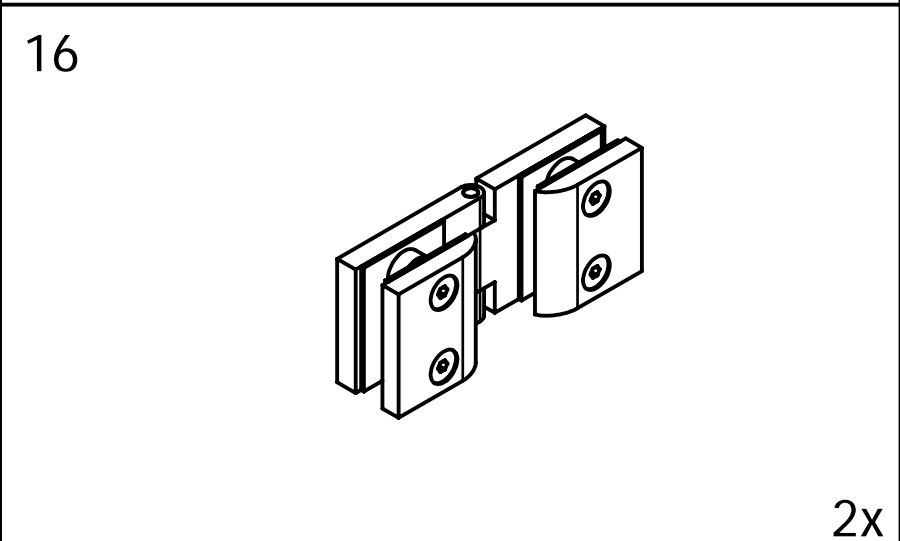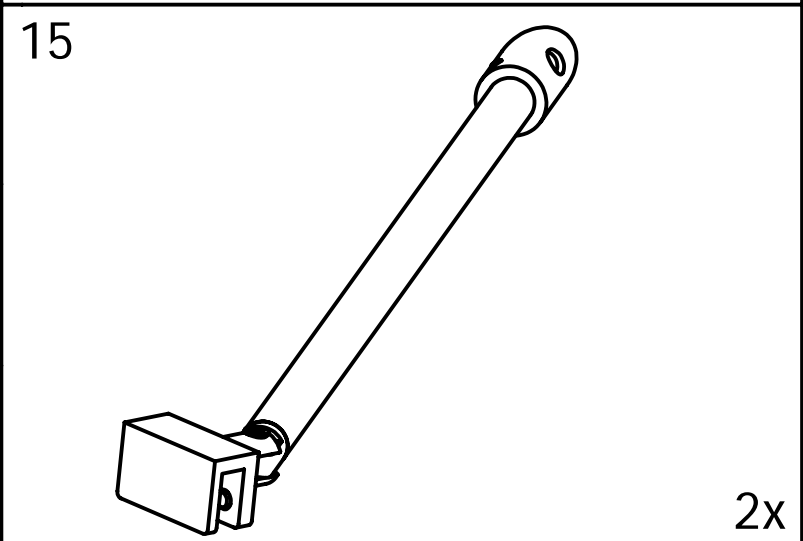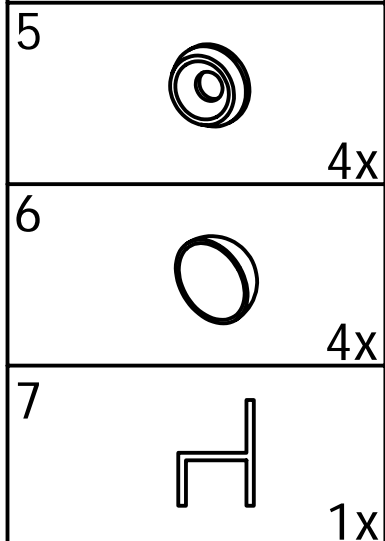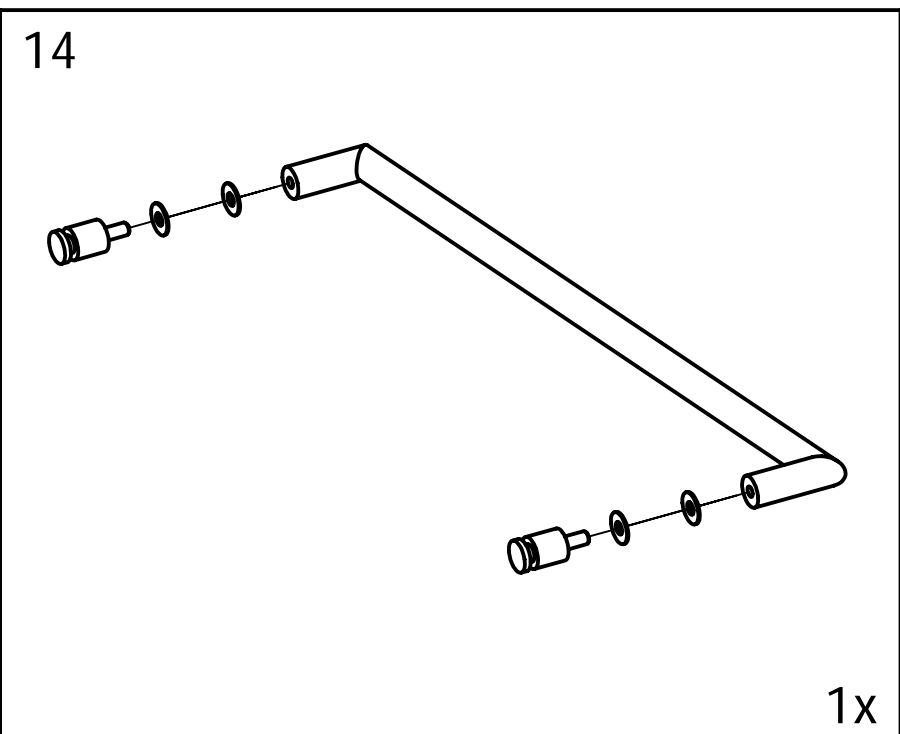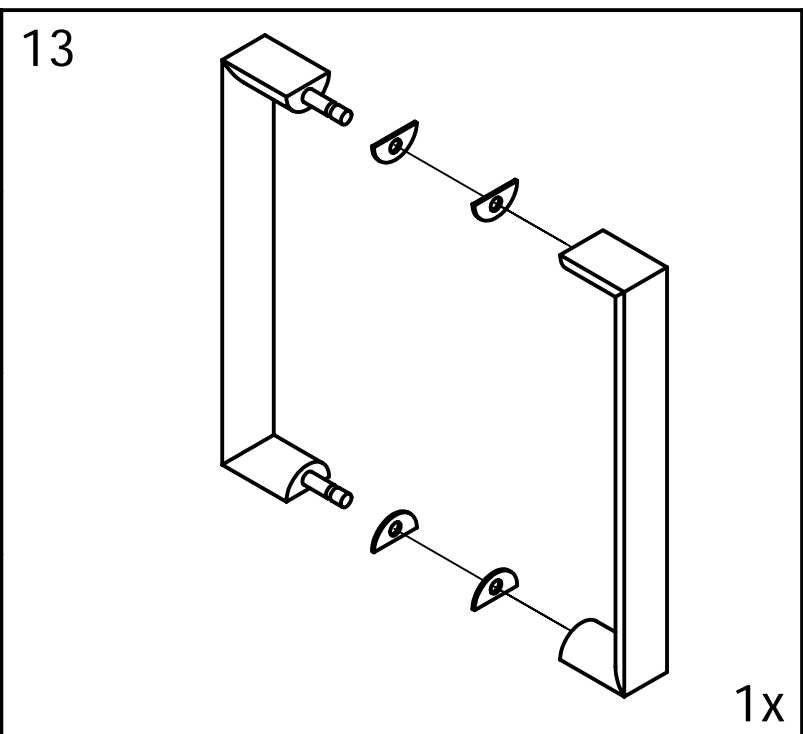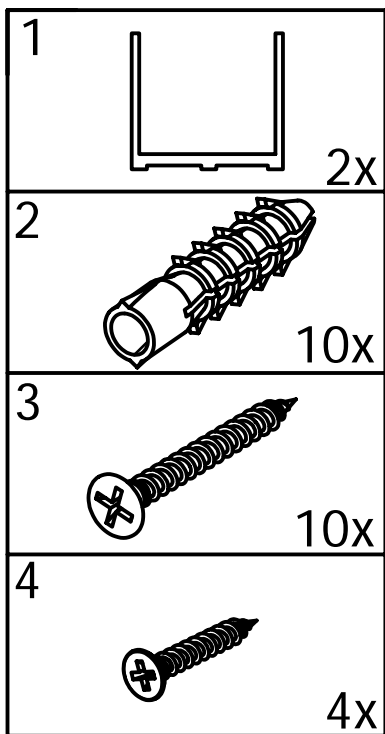

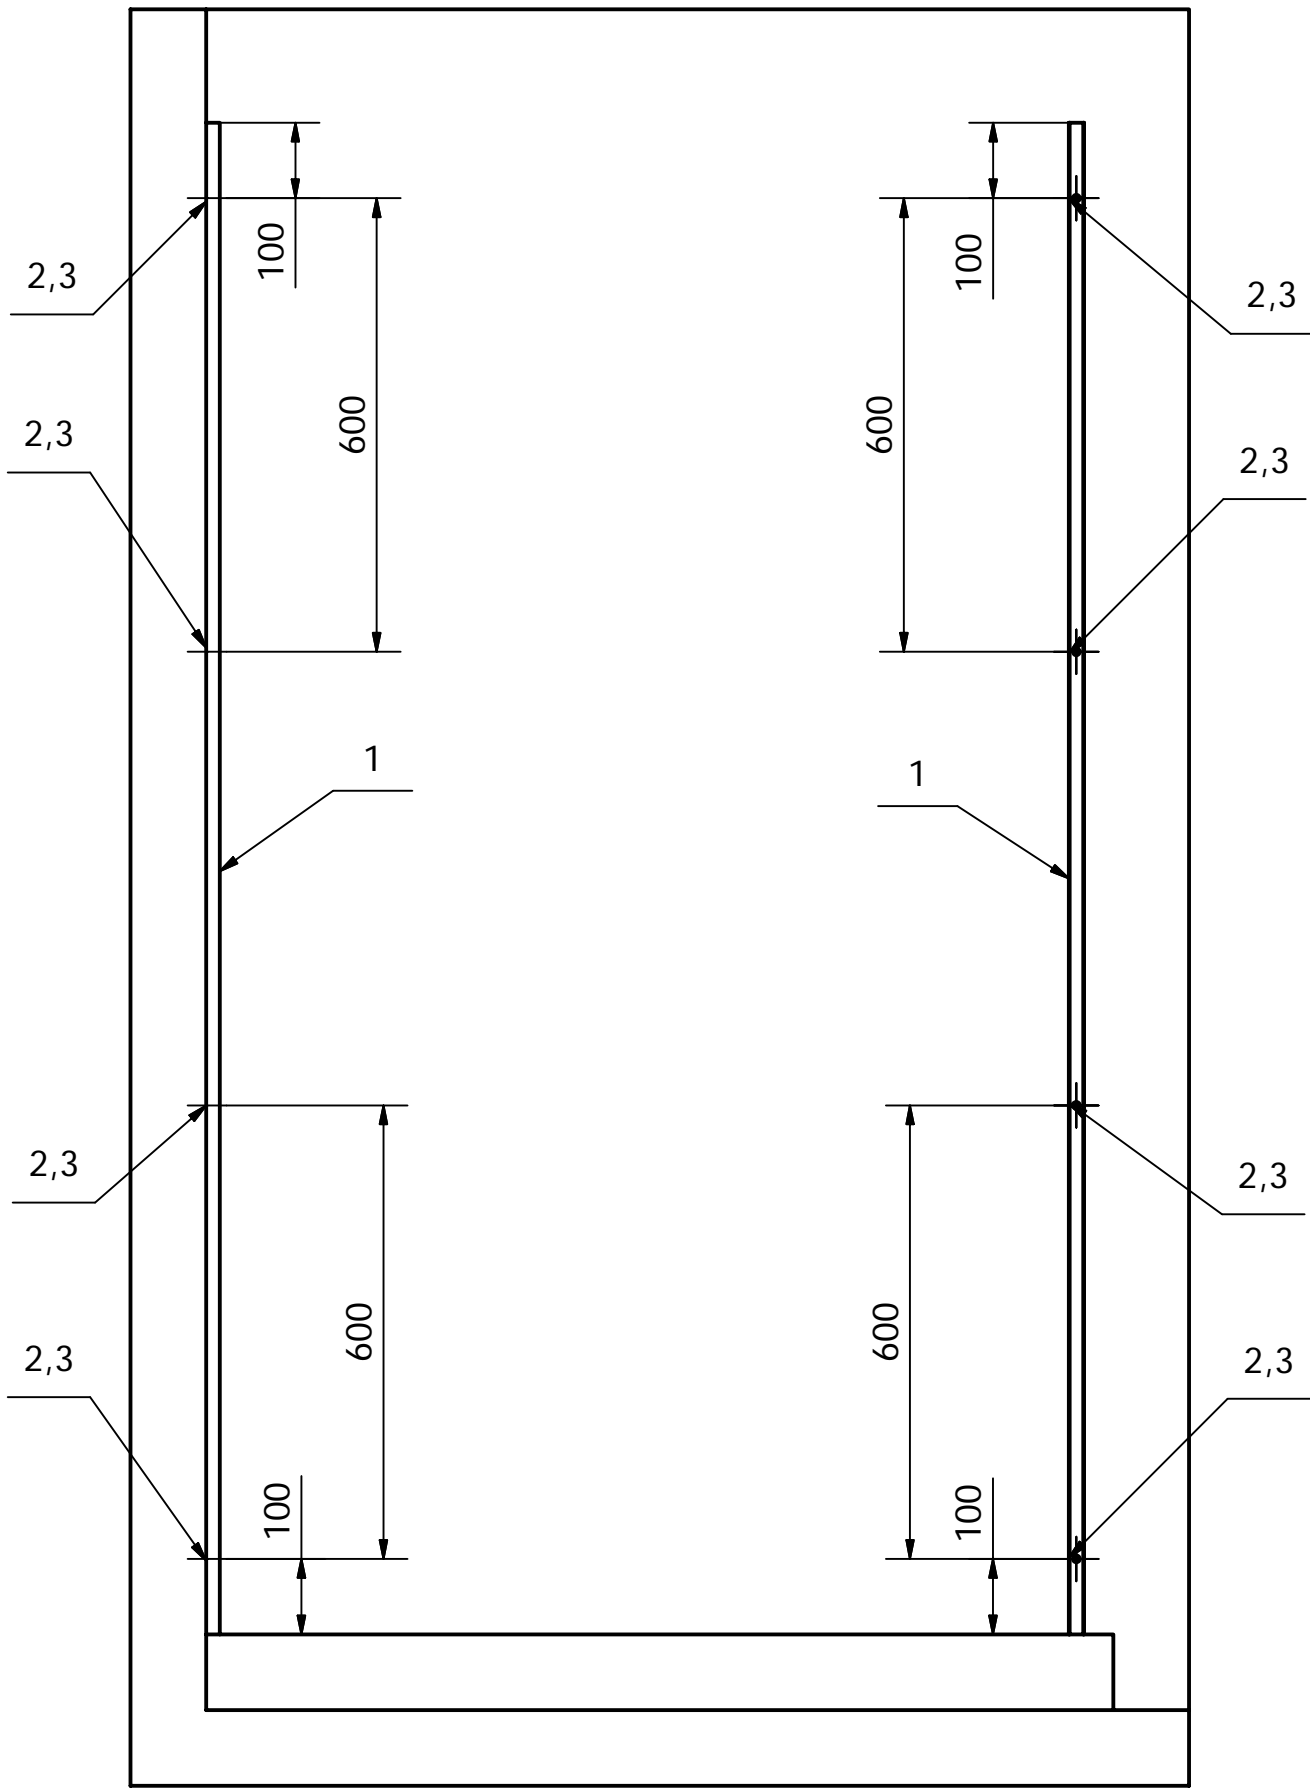



TYP	X	Y
BN 1915 L	950	750
BN 2015 L	1150	750
BN 2115 L	1150	850
BN 4415 L	1050	750
BN 4515 L	1050	850

B (1 : 1)

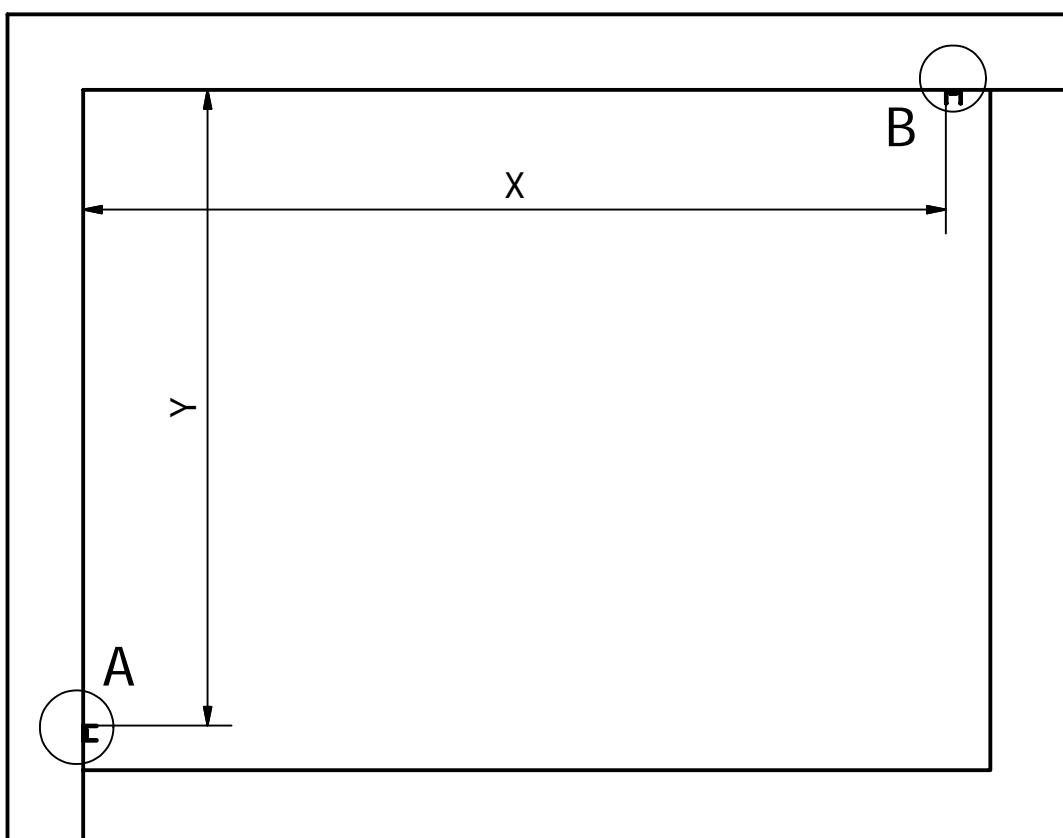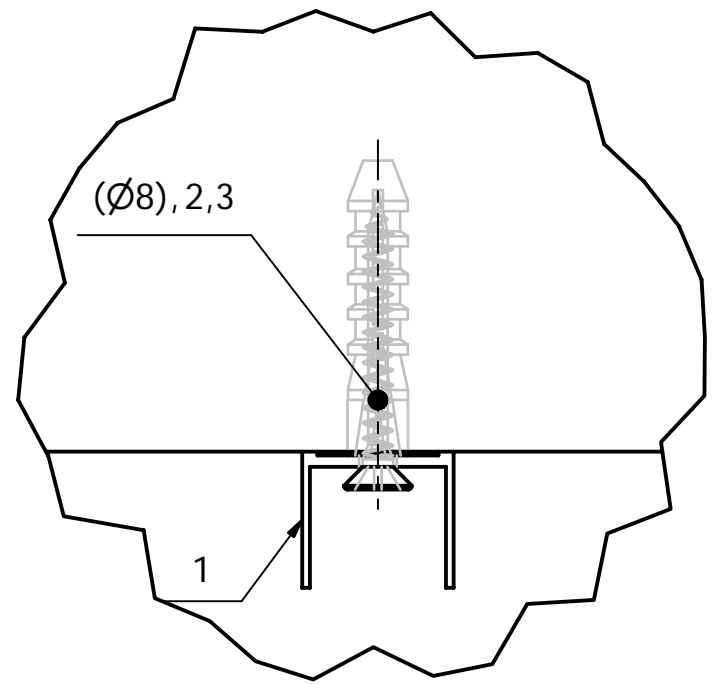


A (1 : 1)

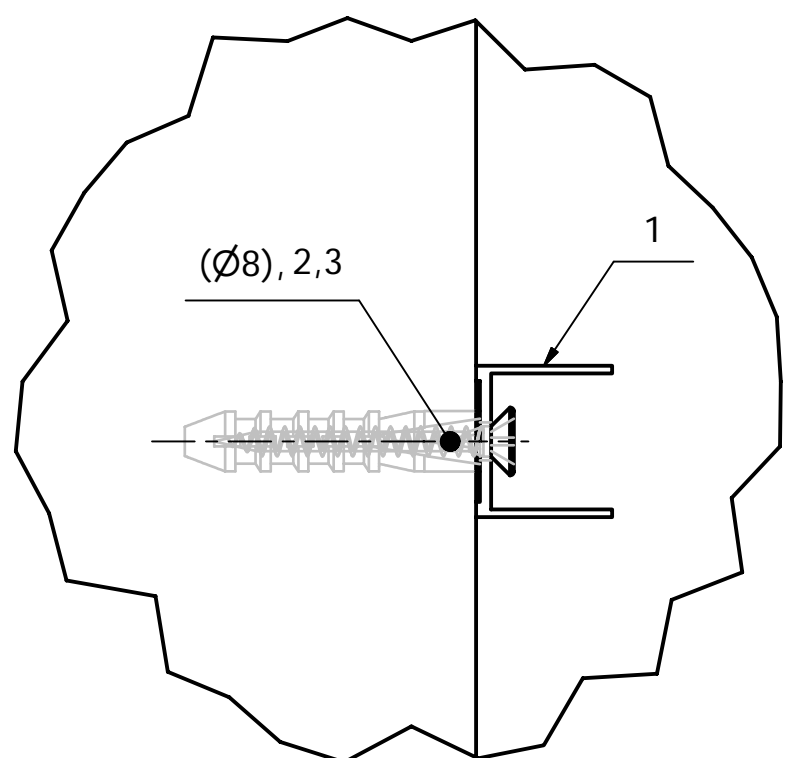


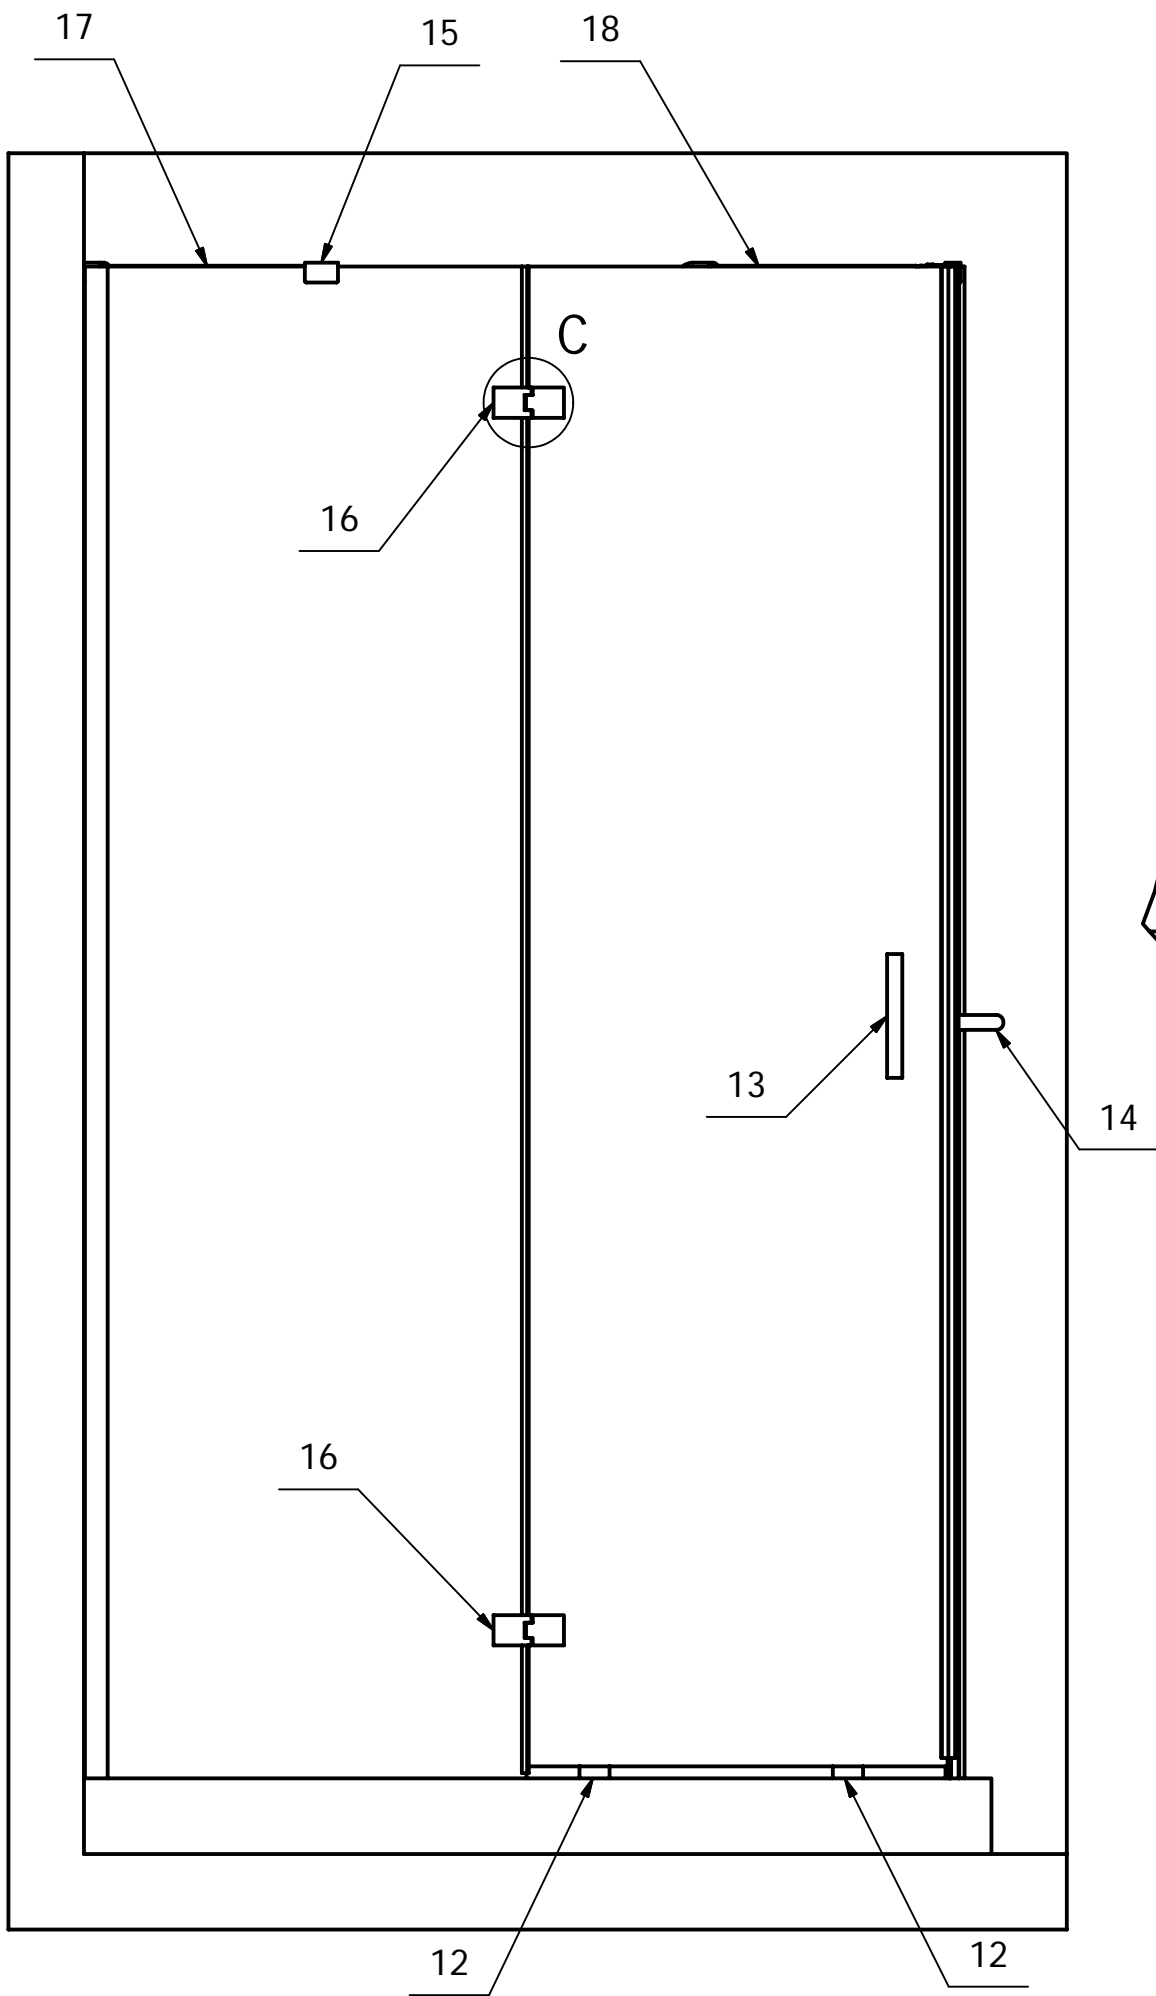


(1 : 10)

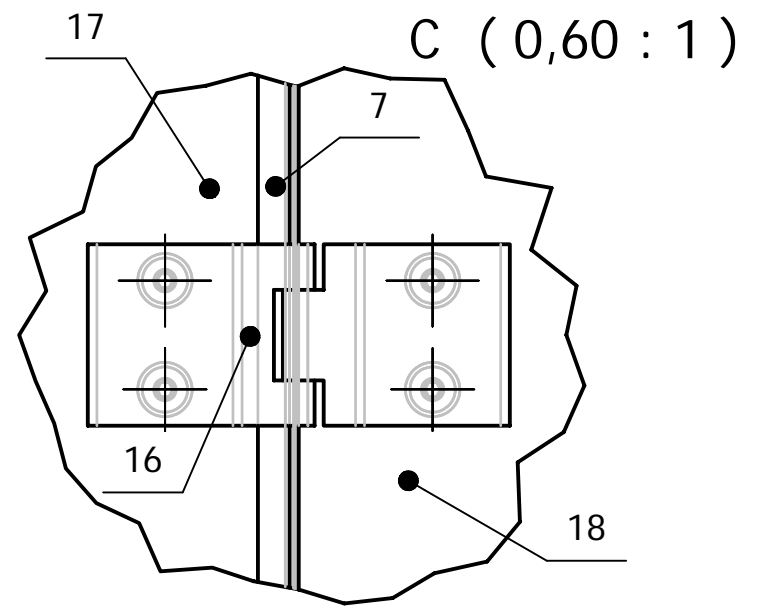


E (0,60 : 1)

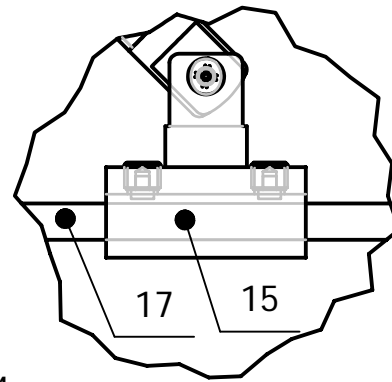



D (0,60 : 1)

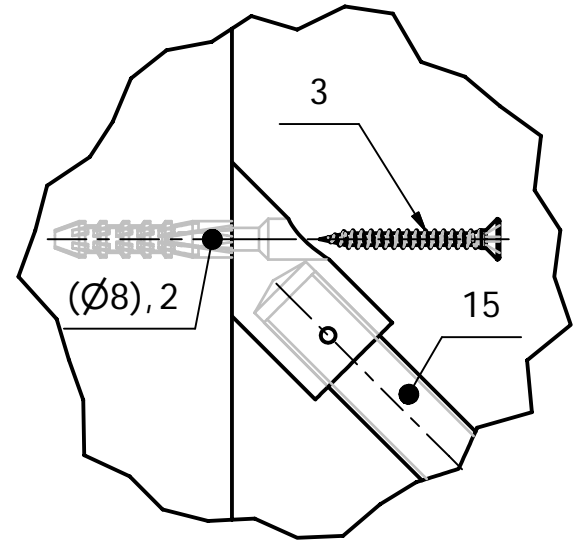




G (1 : 1)

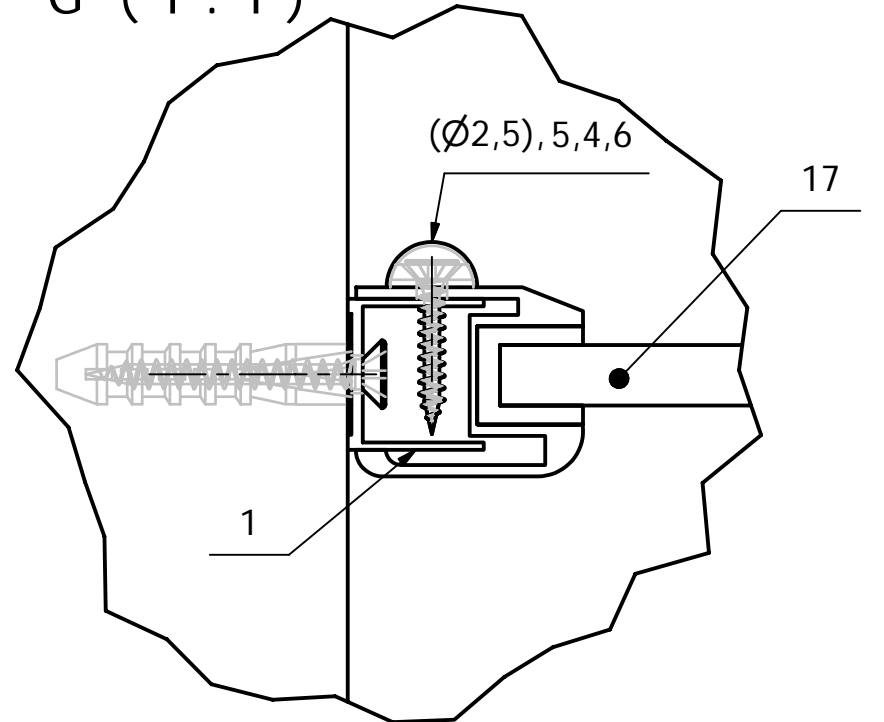


H (1 : 1)

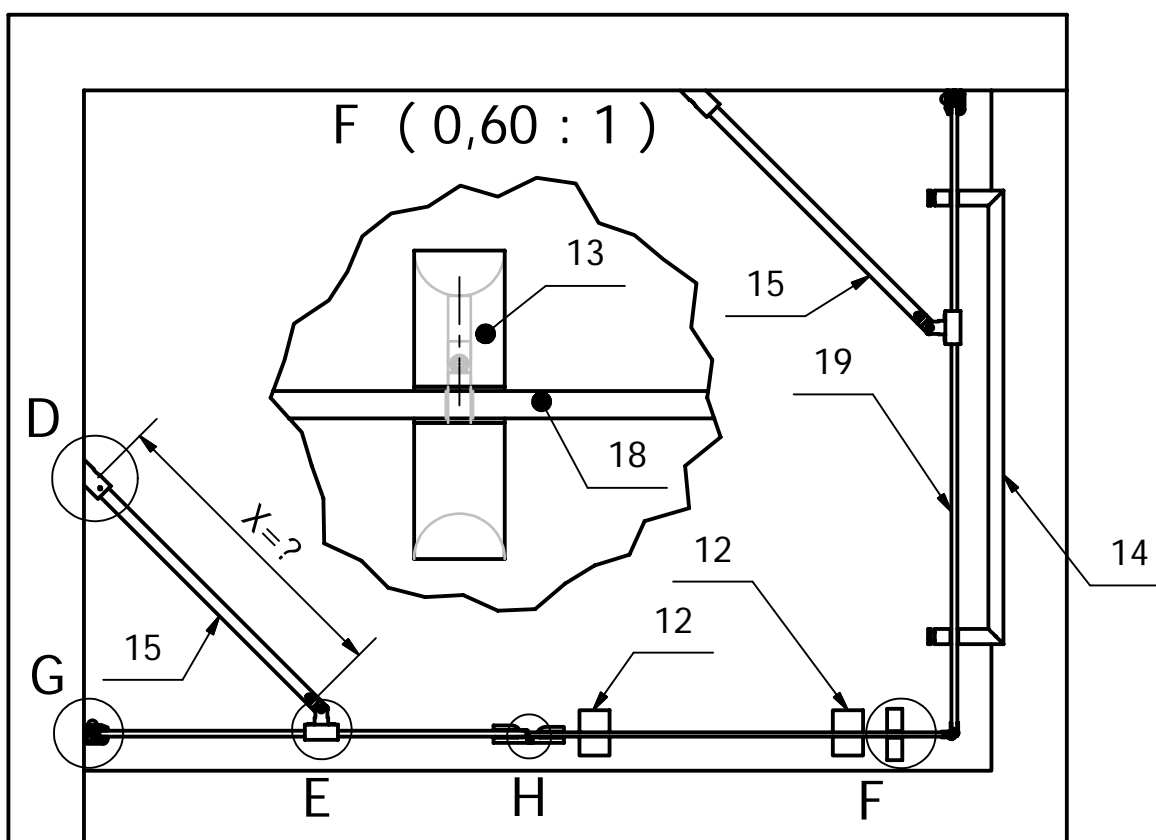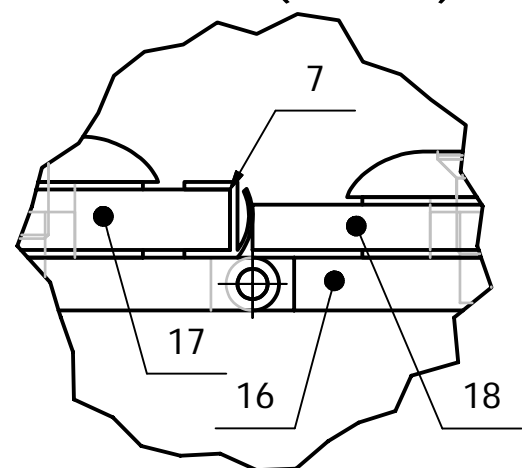


F (0,60 : 1)

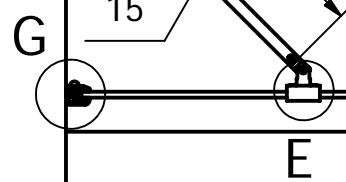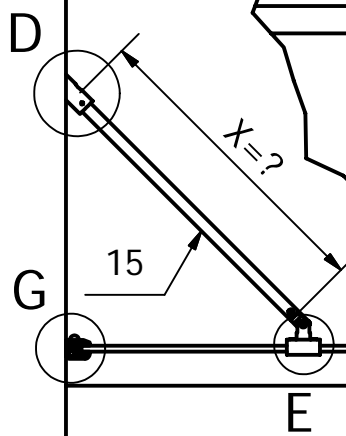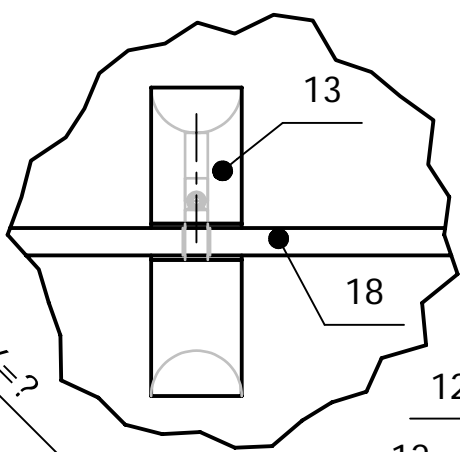


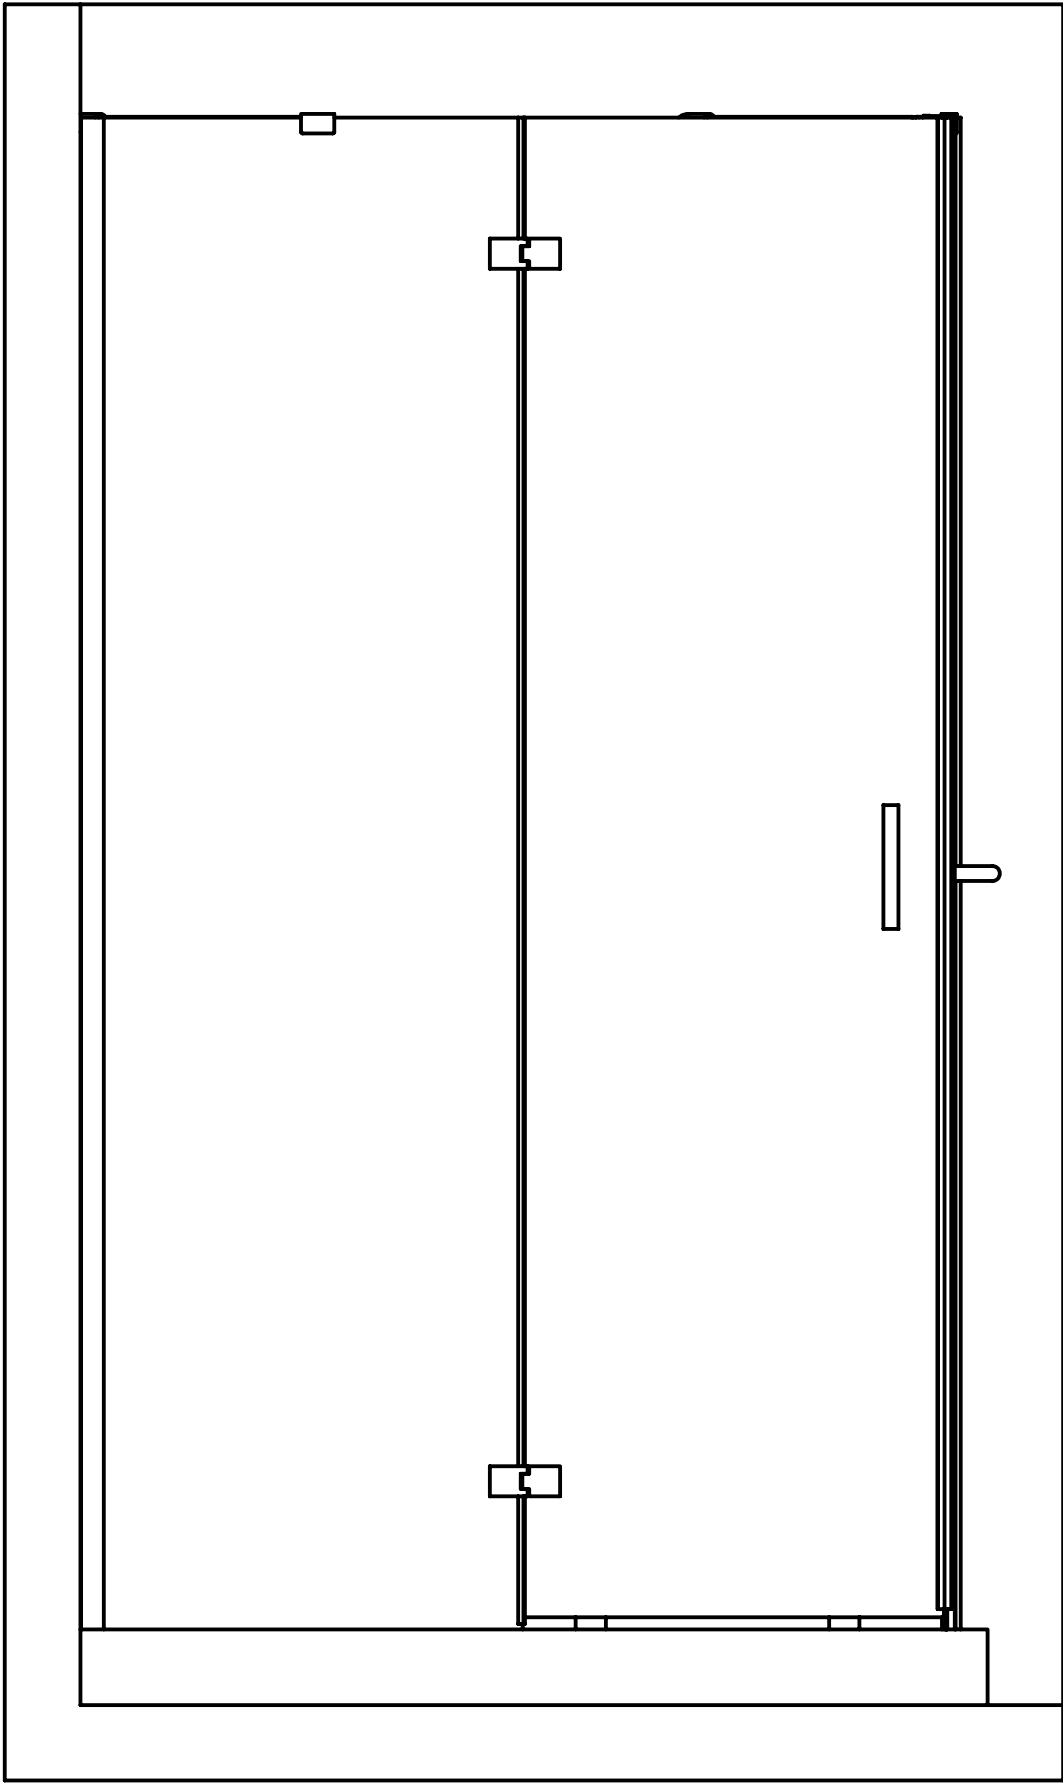


L (1:1)

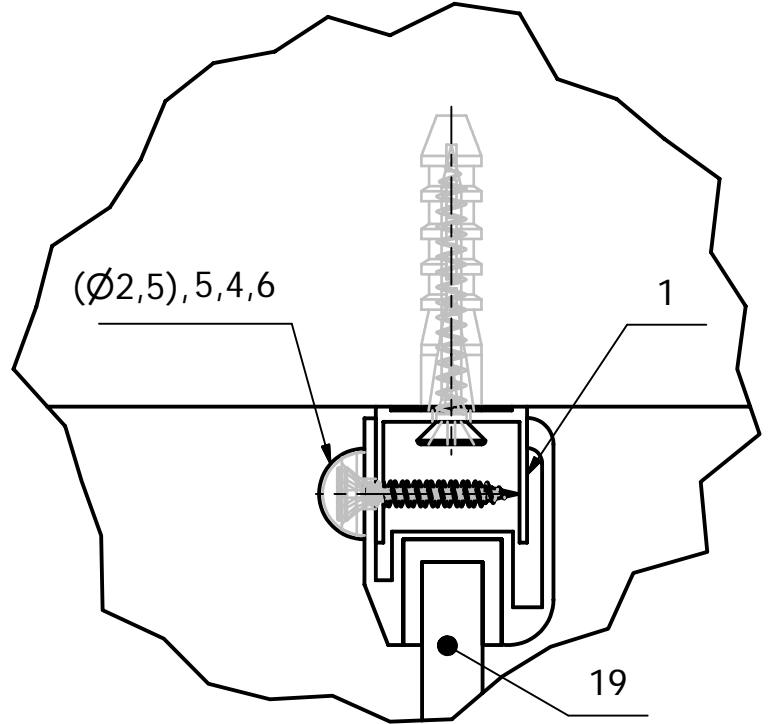


P (1:1)

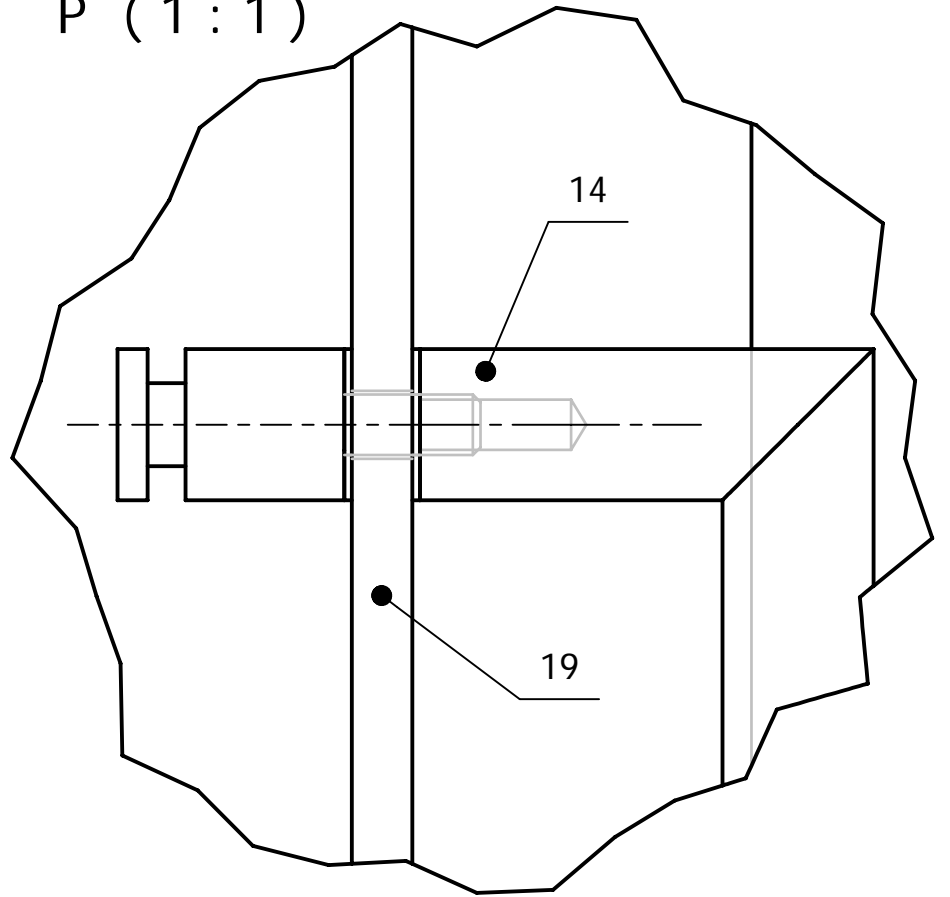


N (1:1)

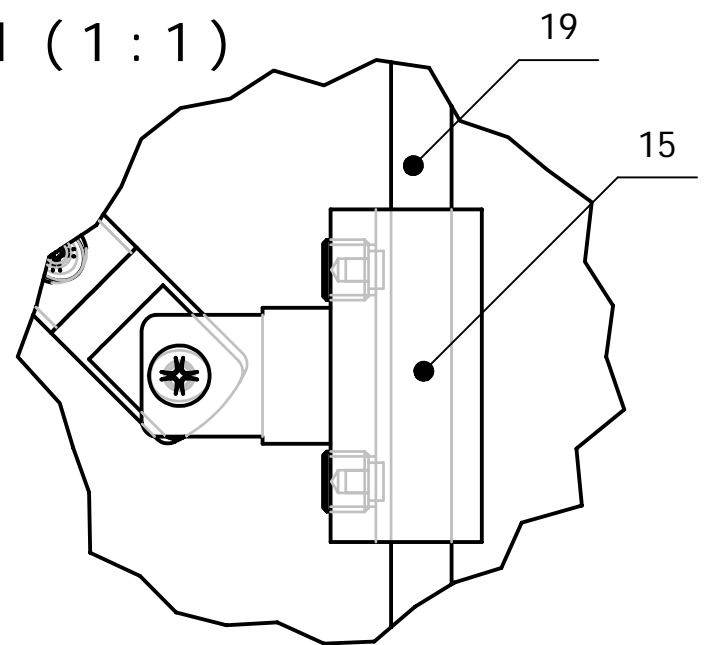


(1:10)

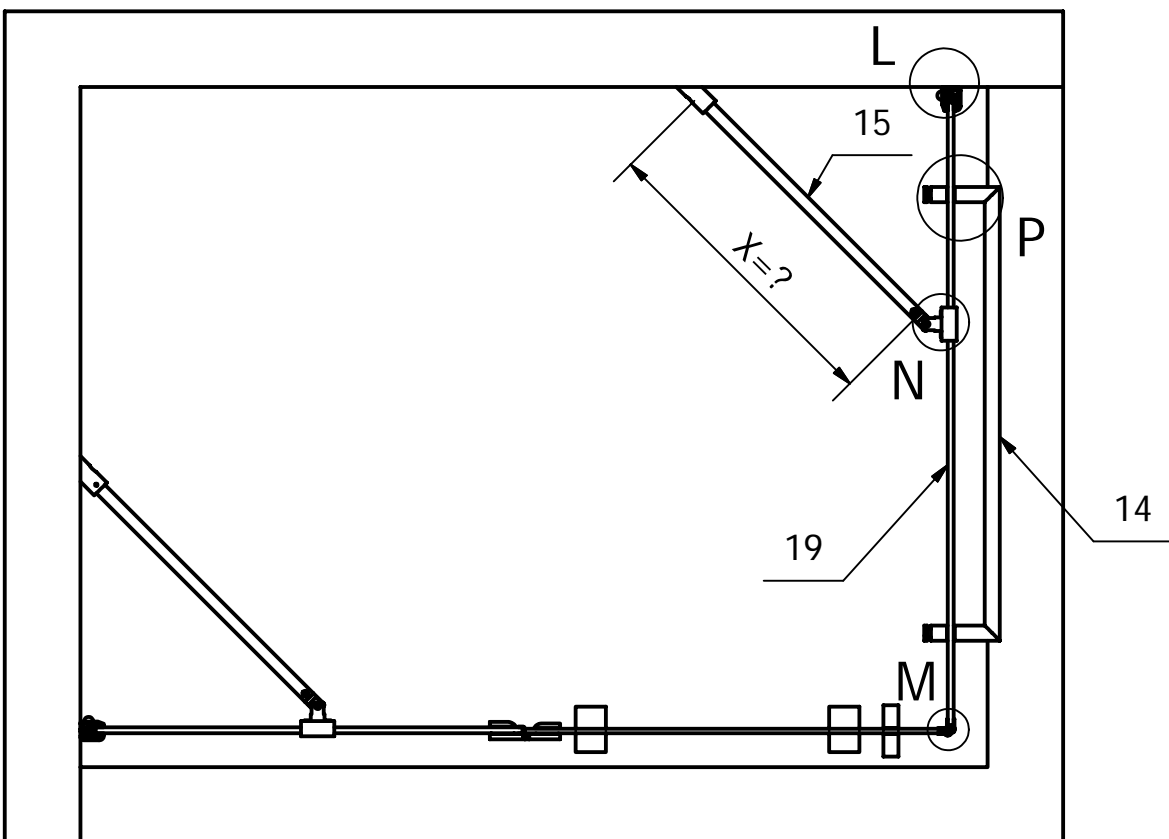


M (1:1)

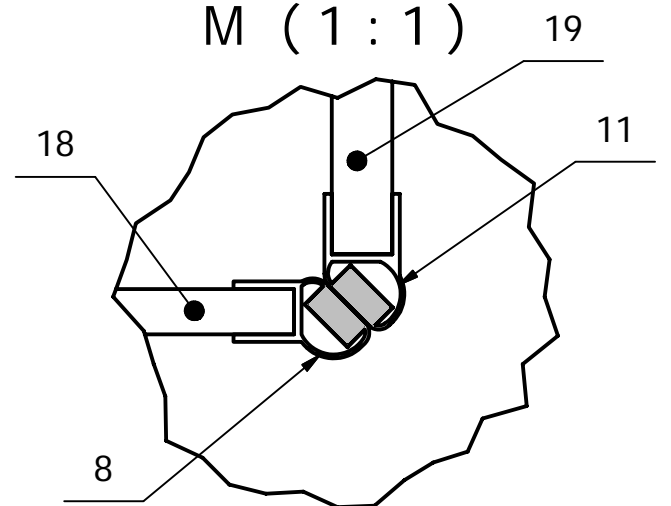


(1 : 10)

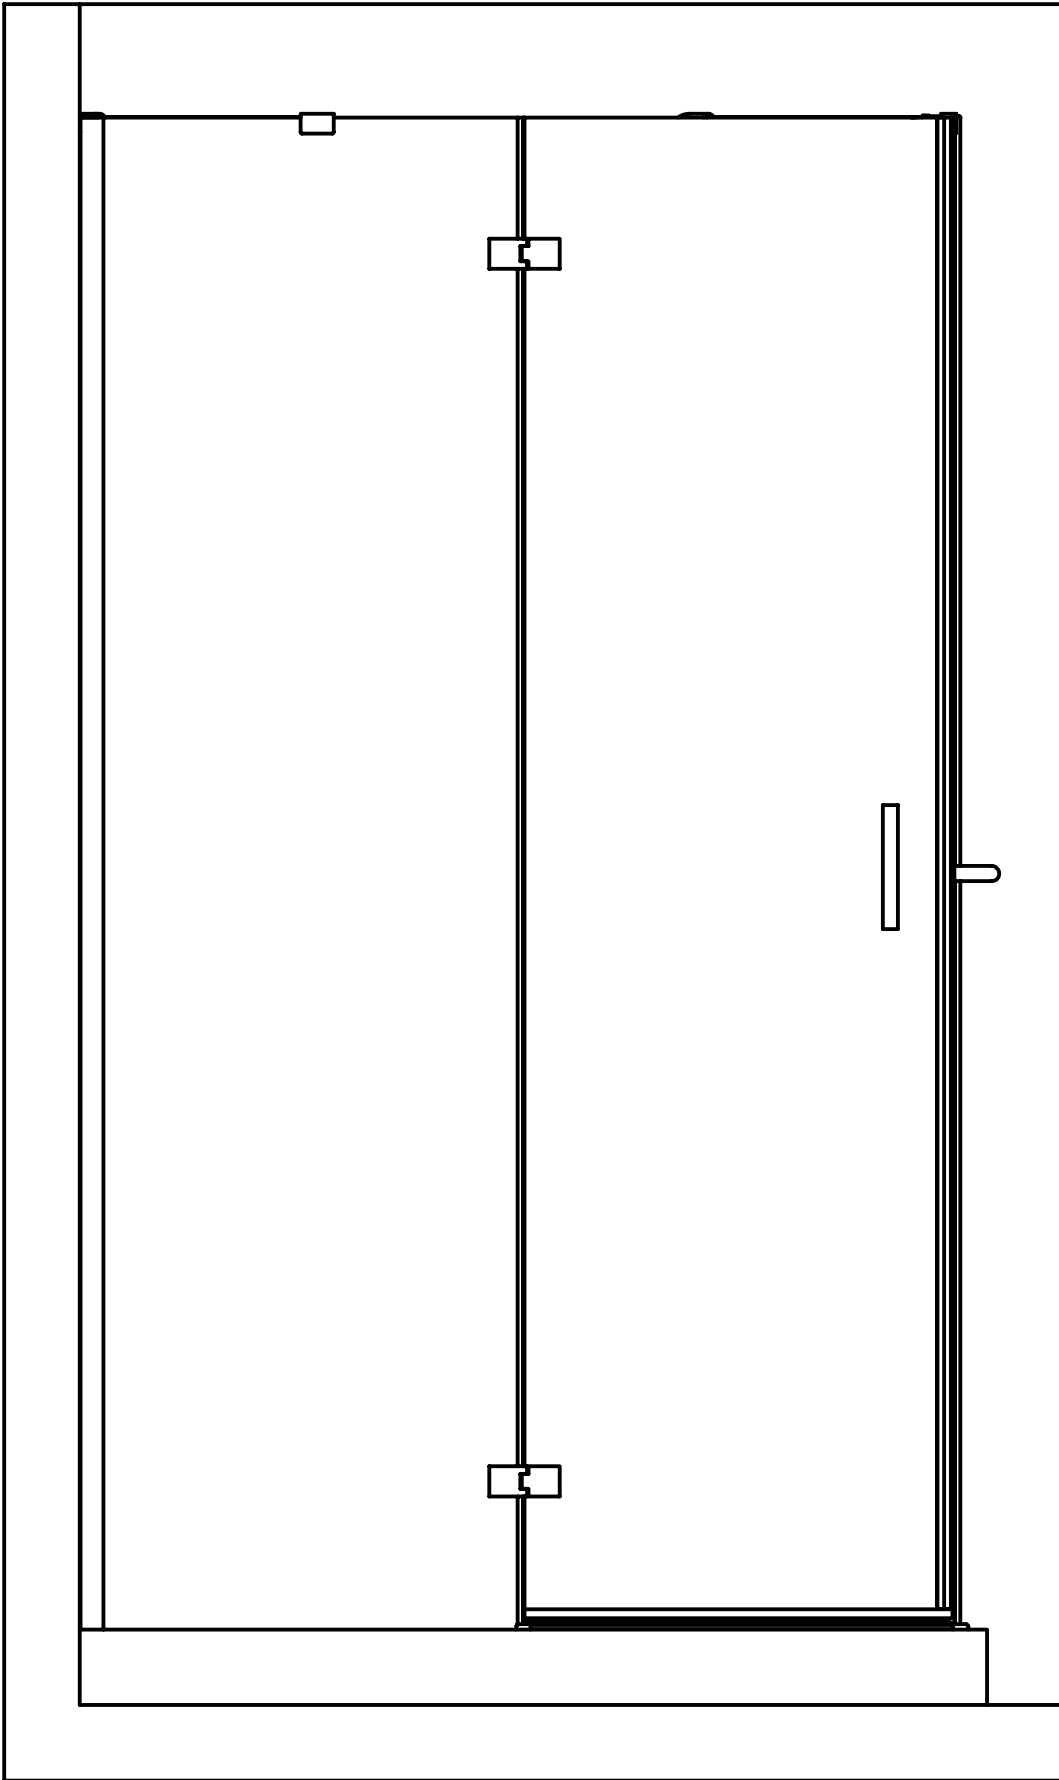


R (1 : 1)

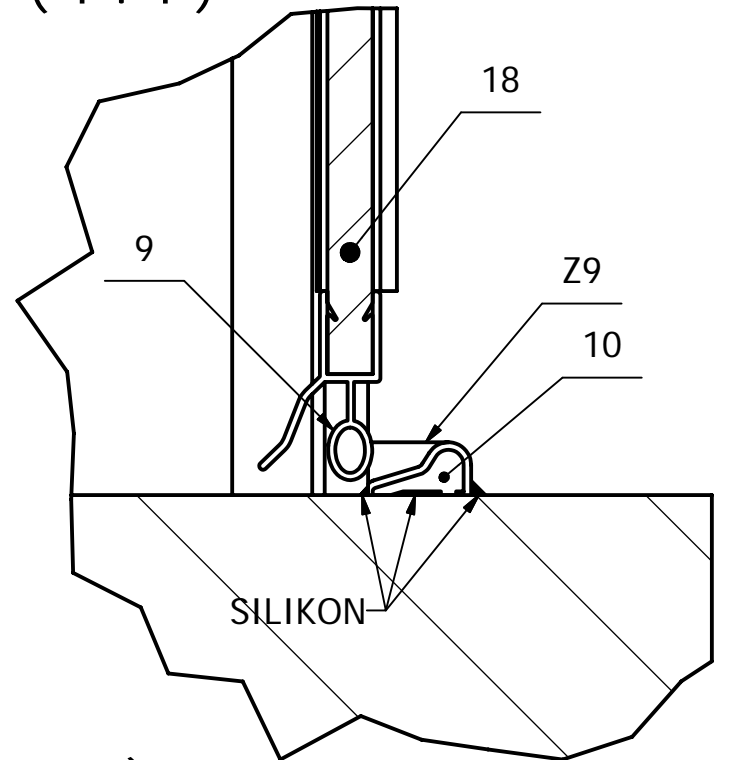


T (1 : 1)

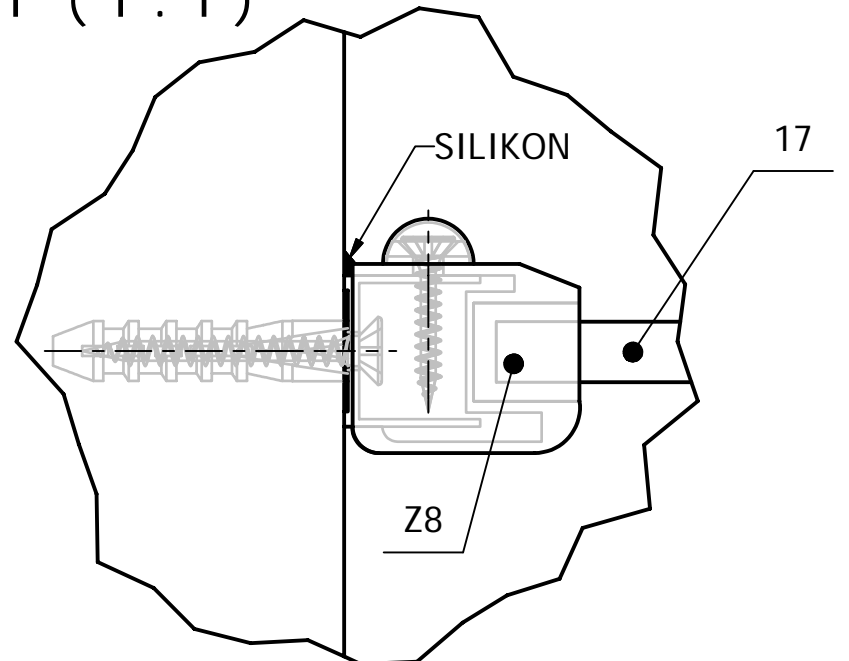


U (1 : 1)

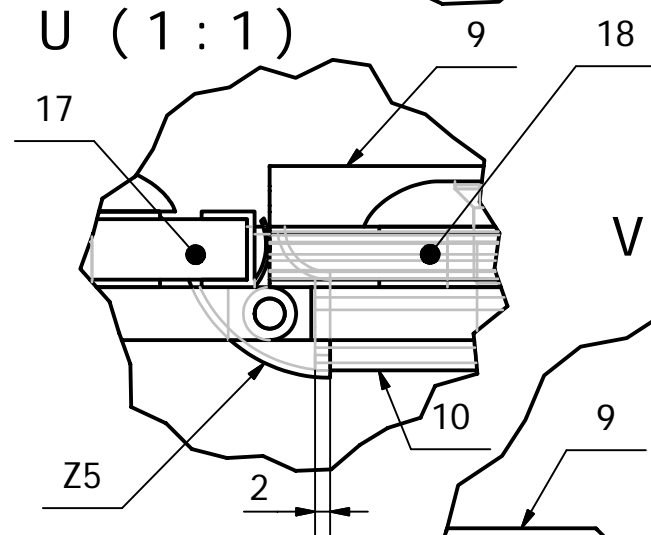

V (1 : 1)

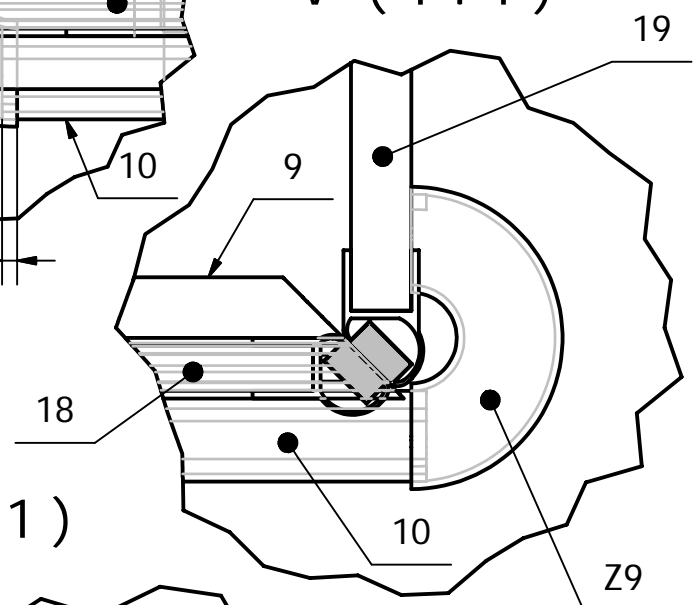

W (1 : 1)

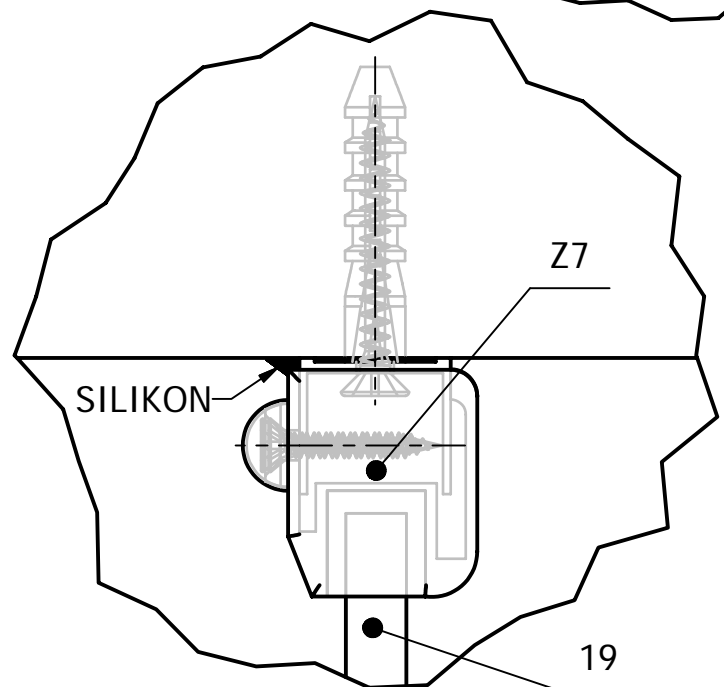

(1 : 10)

